


Adjust Length of Single Rail Pendant

- 1** Loosen top setscrew and remove lower cylinder from connector.
- 2** Loosen bottom set screw and remove coax wire.
- 3** Cut coax wire to desired length.
- 4** Unbraid outer woven wire to expose 3/4" (19mm) of inner wire. Twist outer strands tightly together.
- 5** Strip 1/8" (3mm) of insulation from inner wire.
- 6** Insert wire into cylinder with 1/4" (6mm) sticking out of the top. Tighten setscrew to secure twisted outer wire in bottom slot.
- 7** Cut off exposed strands of wire after installing setscrew.
- 8** Reinsert bottom cylinder into connector and tighten setscrew.

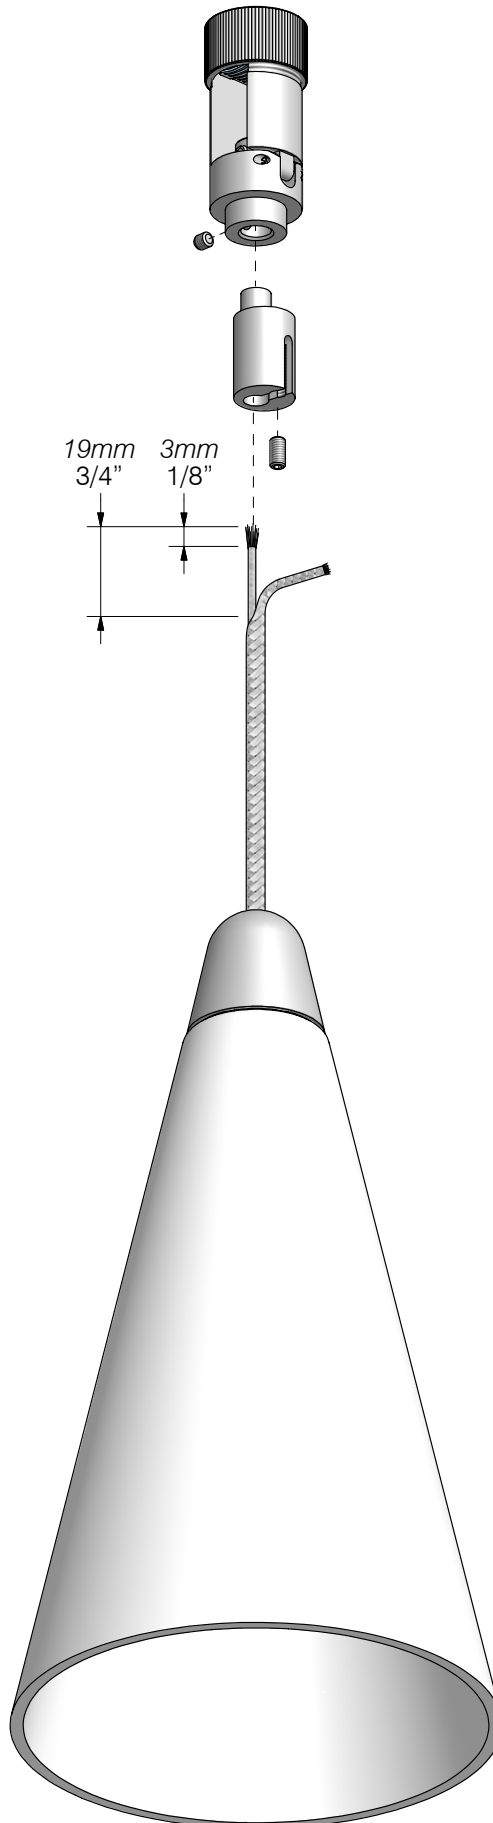

SR Pendant

Pendant Length Adjustment Instructions

CAUTION

- Read all instructions.
- Ensure setscrews are tight and firmly holding wire to prevent pendant from falling.
- Keep this document as a reference.

