
- Connect fixture wires to low voltage wiring (remote LED driver 700mA constant current).
- Align universal crossbar to electrical box and tighten mounting screws.
- Attach C4 canopy to crossbar. Tighten screws with Allen Key.
- Push in jack connector and thread cap until secure.

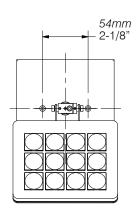

Parts	Qty.
<ul> <li>LED unit</li> </ul>	1
<ul> <li>C4 Canopy</li> </ul>	1
<ul> <li>Hex socket head screws</li> </ul>	2
<ul> <li>Mounting screws</li> </ul>	2
<ul> <li>Universal crossbar</li> </ul>	1


## **Tools**

• Allen key included

## **Maintenance**

Clean using a soft cloth.



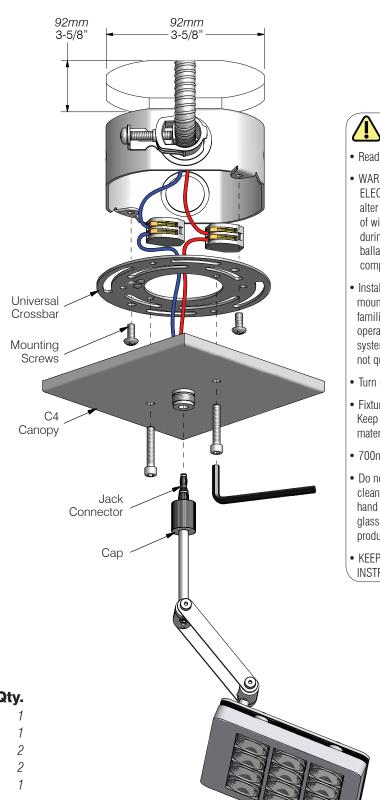

L72C4
Installation
Instructions

## CAUTION

- Read all instructions.
- WARNING: RISK OF FIRE OR ELECTRICAL SHOCK: Do not make or alter any openings in the compartment of wiring or electrical components during installation. Do not alter or add ballasts, or any other electrical components.
- Installation and use of this fixture mounting assembly requires a person familiar with the construction and operation of luminaire electrical systems and the hazards involved, if not qualified, do not attempt installation.
- Turn off power before installation.
- Fixture gets very hot. Do not cover Keep 9" away from combustible materials.
- 700mA constant current driver only.
- Do not spray water on fixture during cleaning. Avoid using detergents with hand softeners, anti-bacterial agents, glass cleaners or acrylic cleaning products.
- KEEP THESE INSTALLATION INSTRUCTIONS.