


1 Connect fixture wires to low voltage wiring (remote LED driver 350mA constant current).

2 Attach mounting plate to electrical box.

3 Thread C1 canopy to mounting plate

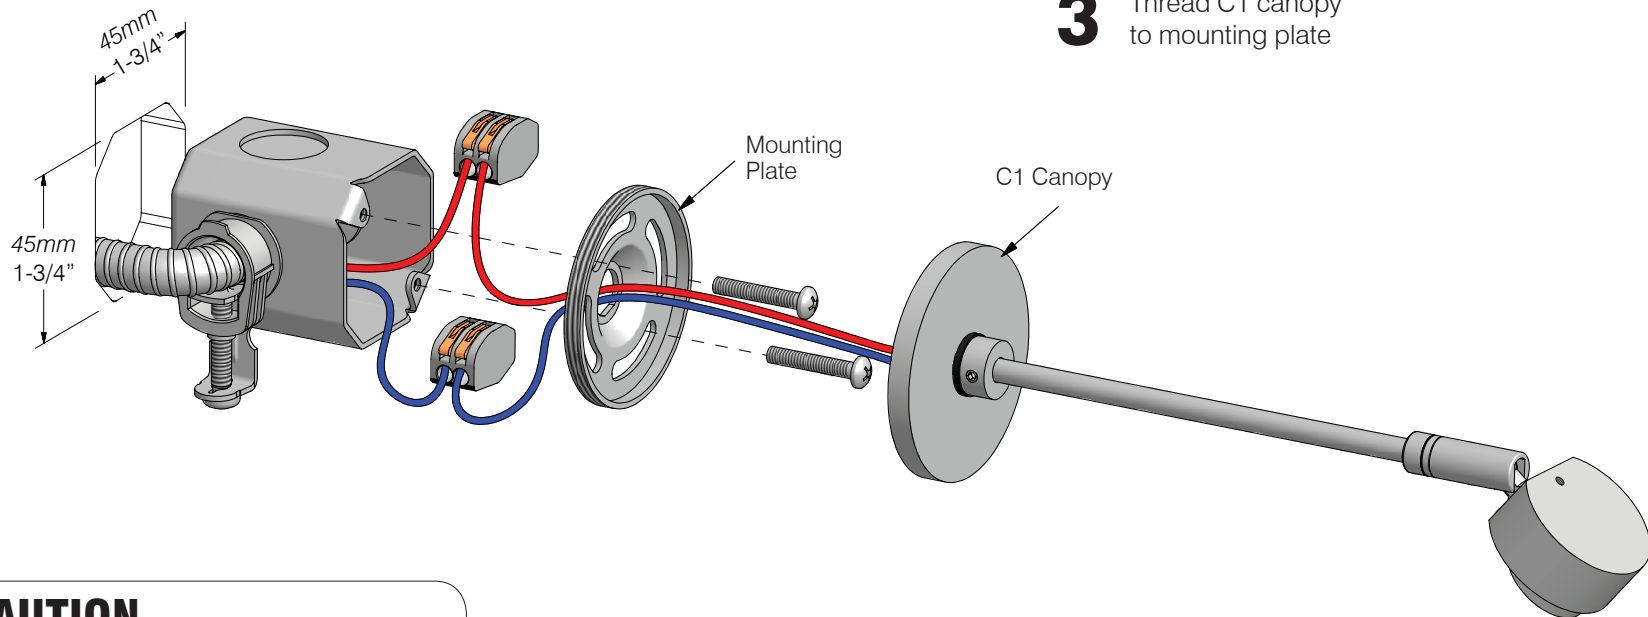

! CAUTION • Read all instructions.

- WARNING: RISK OF FIRE OR ELECTRICAL SHOCK: Do not make or alter any openings in the compartment of wiring or electrical components during installation. Do not alter or add ballasts, or any other electrical components.
- Installation and use of this fixture mounting assembly requires a person familiar with the construction and operation of luminaire electrical systems and the hazards involved, if not qualified, do not attempt installation.
- Turn off power before installation.
- Connect to 350mA constant current LED driver only.
- Do not spray water on fixture during cleaning. Avoid using detergents with hand softeners, anti-bacterial agents, glass cleaners or acrylic cleaning products.
- KEEP THESE INSTALLATION INSTRUCTIONS.

Parts

- LED unit 1
- C1 Canopy 1
- Cross pan head screws 2
- Mounting plate 1
- Wire connectors 2
- 1-3/4 x 1-3/4 x 2" (45 x 45 x 51mm) Electrical box *included*
- Conduit & strain relief connector *not included*

Tools

- Phillips screwdriver *not included*

Maintenance

Clean acrylic lens using a soft cloth.

LED81
Installation
Instructions