


## Adjust Length of Cable System Pendant

- 1** Cut coax wire to desired length.
- 2** Unbraid outer woven wire to expose 3/4" of inner wire. Twist outer strands tightly together.
- 3** Strip 1/8" of insulation from inner wire.
- 4** Remove setscrews.
- 5** Insert wire until stripped portion is visible through top setscrew hole. Reinsert top setscrew and tighten firmly.
- 6** Insert twisted outer core of wire into bottom slot and tighten setscrew.
- 7** Cut off exposed strands of wire after installing setscrew.

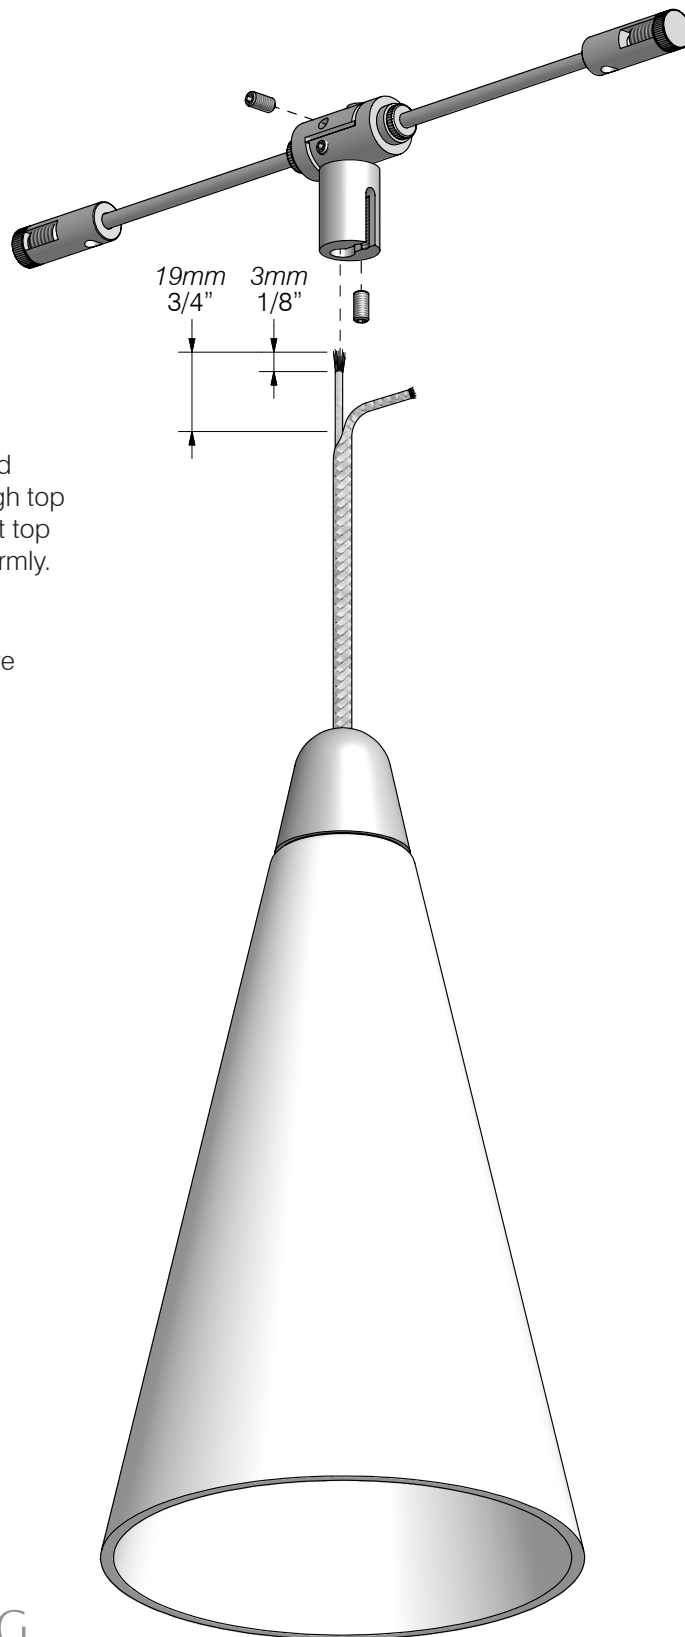

### CAUTION

- Read all instructions.
- Ensure setscrews are tight and firmly holding wire to prevent pendant from falling.
- Keep this document as a reference.