
# Installation Instructions

- Connect fixture wires to low voltage wiring (remote LED driver 700mA constant current).
- Align canopy to electrical box.
- Tighten screws with Allen Key.
- Push in jack connector and thread cap until secure.

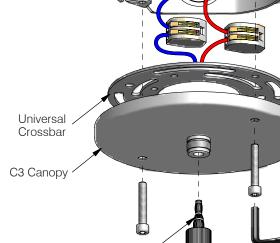

Jack

Cap

Connector

92mm

3-5/8"


92mm

3-5/8'



## CAUTION

- · Read all instructions.
- WARNING: RISK OF FIRE OR ELECTRICAL SHOCK: Do not make or alter any openings in the compartment of wiring or electrical components during installation. Do not alter or add ballasts, or any other electrical components.
- · Installation and use of this fixture mounting assembly requires a person familiar with the construction and operation of luminaire electrical systems and the hazards involved, if not qualified, do not attempt installation.
- Turn off power before installation.
- · Fixture gets very hot. Do not cover Keep 9" away from combustible materials.
- 700mA constant current driver only.
- Do not spray water on fixture during cleaning. Avoid using detergents with hand softeners, anti-bacterial agents, glass cleaners or acrylic cleaning products.
- KEEP THESE INSTALLATION INSTRUCTIONS.

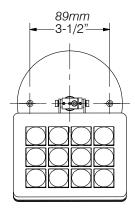

#### **Parts**

• LED unit

C3 Canopy

Qtv.

• Universal crossbar

optional

### **Tools**

 Allen key included

#### **Maintenance**

Clean using a soft cloth.

