

INPUT PRIMARY 120/277V
12V Remote Transformer

X02 C3

Ceiling Fixture Installation Instructions

Mount C3 Canopy and Fixture


- 1** Connect primary to driver input wires then fit into electrical box.

For remote driver connect fixture wires to low voltage wiring (remote transformer 60W minimum 12V).

- 2** Align C3 canopy to electrical box.

- 3** Tighten screws with Allen Key.

- 4** Push in jack connector and thread cap until secure.

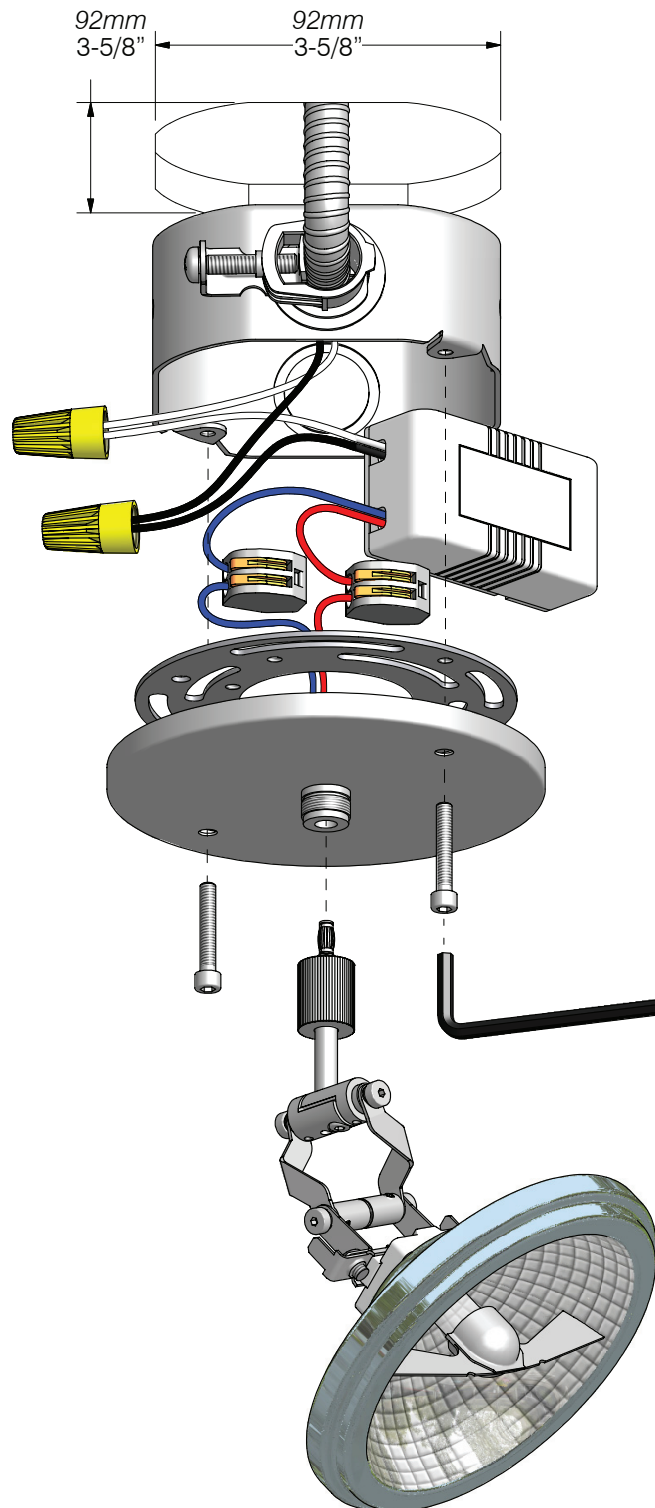

CAUTION

- Read all instructions.
- Risk of fire and electrical shock. Turn off power before installation.
- Connect to 12V electronic transformer.
- Use only low voltage electronic dimmers.
- Maximum 50W lamp.
- Test installation by leaving fixture on for 20-30 minutes to ensure proper operation.
- Keep this document as a reference.